


ELECTRONIC DIGITAL SCALE USER MANUAL

Thanks for choosing our digital counting scale which is easy to operate. Please read the user manual carefully before you use it.

I. Specification parameter:

Power Control :	Auto power off after 1 minutewithout operation (set up)
Switch on/off :	
Working temperature:	10-30℃
LCD display:	5 digit LCD display
Back light :	White
Power Supply :	Alkaline Battery AAA x 2
Measure :	116X64X17mm
Weight:	95.6G
Salver Size :	62.2X53.7mm
Tare	
Counting	
Low Power	
Unit Switch :	g/oz/ozt/dwt/ct/tl/gn

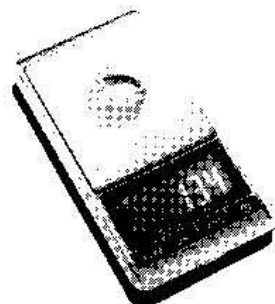

II. Operation :

Put 2xAAA battery into the battery room of the scale. Place the scale on a solid and flat board without wind and vibrancy.

1. Press the button "ON/OFF", "0.0" or "0.00" is displayed in 3 seconds.
2. Put the article on the salver. The unit code is twinkling when it has not be steady; You can read the weight when the unit code stop twinkling.
3. Press the button "UNIT" to switch unit: g/ oz/ ozt/ dwt/ ct/ tl/ gn.
4. Press the button "TARE" to force to the nulling operation.
5. Press the button "PCS" to operate counting (See detail in II.8. How to operate Counting Function)
6. Press the button "ON/OFF" to turn off the scale at working status.

7. Calibrating Operation:

Press the button "ON/OFF" for 3 seconds till the screen displays a weight (for example: 500.0). Please put right calibration weights (500G) on the salver (If you do not have right calibration weights, you can press the button "TARE" to select a weight). you can see the data on the screen is changing, then displays "PASS" and the back light become bright. The calibrating operation is complete. (You should calibrate the scale when the temperature change or other reasons).

8. How to operate Counting Function

Please prepare 25, 50, 75 or 100 pieces of samples. When the scale is ready to weight goods, place the samples on the salver, then you can see the weight. Please press the button "PCS" for 3 seconds, the screen shows a quantity you can press the button "UNIT" to select a right quantity 25-, 50, 75 or 100 pieces, finally, press the button "PCS" for confirmation. At this time, the screen displays the quantity. You can press the button "PCS" to come to weighing status, then you can weight more goods. Press the button "PCS" to read quantity when you need.

III. Unit Switch

1 CT (MET. CARAT)	= 0.19997 G	1 OZ (AVOIRDUPOIS OUNCE)	= 28.3495 G
1 DWT (PENNY WEIGHT)	= 1.5552 G	1 OZT (TROY OUNCE)	= 31.1034 G
1 GN (GRAIN)	= 0.0648 G	1 TL (TAEL)	= 37.4999 G

IV. Full Load Comparative Table

CAPACITY	300G/0.01	500G/0.01	3000G/0.1
CARAT (CT)	1500CT/0.05	2500CT/0.05	15000CT/0.5
OUNCE (OZ)	10.582 OZ/0.001	17.636 OZ/0.001	96.480 OZ/0.01
PENNY WEIGHT (DWT)	192.92 DWT/0.01	321.54 DWT/0.01	1929.2 DWT/0.1
TAEL (TL)	8.000 TL/0.0005	13.333 TL/0.0005	80.00 TL/0.005
GRAIN (GN)	4629.6 GN/0.2	7716 GN/0.2	46296 GN/2
TROY OUNCE (OZT)	9.6452 OZT/0.01	16.0754 OZT/0.01	98.452 OZT/0.01

Attention :

- ① Place the scale on a solid and flat board without wind and vibrancy
 - ② Do not over load, otherwise the sensor will be damaged; Do not bump the salver when you put the article on the salver, put it carefully.
 - ③ Keep away from mobile phones over 50cm.
 - ④ Read the weight after the unit code stop twinkling.
 - ⑤ Replace batteries when it shows low power.
 - ⑥ Working temperature: 10-30℃. Please calibrate the scale if the temperature is too low/high. Please place the scale in 30 minutes first, let the temperature is even, then make the calibration.
 - ⑦ The screen display "FULL" when it is over weight.
- Please do not disassemble! Careful storage!

MADE IN CHINA