


ALCOHOL BREATH TESTER & TIMER WITH FLASHLIGHT

Instruction Manual

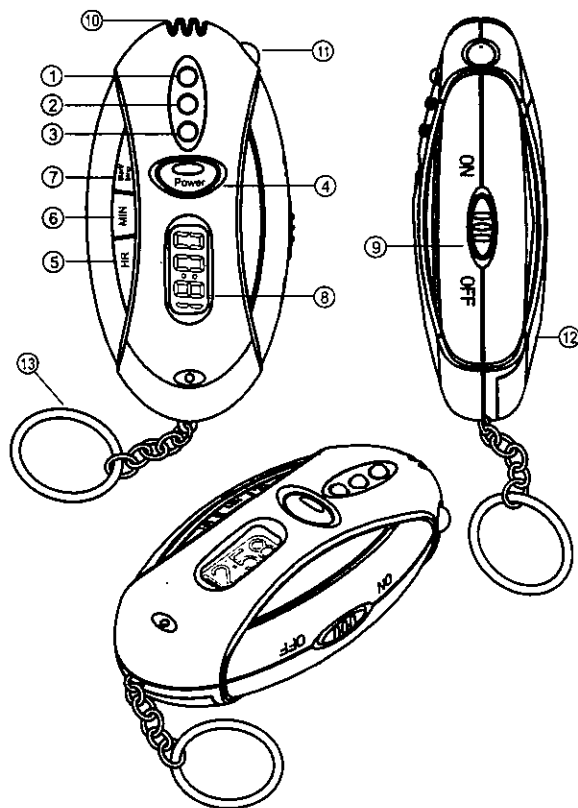

- | | |
|-----------------------|---------------------------|
| (1) Red LED | (8) LCD Display for Timer |
| (2) Yellow LED | (9) Torch Switch |
| (3) Green LED | (10) Exhale Pipe |
| (4) POWER Button | (11) Torch Lamp |
| (5) HR Button | (12) Battery Compartment |
| (6) MIN Button | (13) Key Chain |
| (7) START/STOP Button | |

Features

1. 3-step alcohol test.
2. Quick response and resume.
3. Torch (Orange LED).
4. Key chain.
5. Count-up & countdown timer
6. Use two 1.5V "AAA" /UM-4 alkaline batteries

Battery Installation & Replacement

1. Open the battery compartment lid on the back of the unit.
2. Insert two "AAA" (UM-4) high-quality alkaline batteries (not included) with correct polarity as indicated.
3. Replace the battery compartment lid.
4. When the LED indicators for alcohol test or the light of torch become dim, please replace with new batteries.

Alcohol Test

1. Press and hold the POWER button, the green LED will keep lighting for READY in about 10 seconds, the unit enters into the testing status.
2. Wait about 10 seconds, then exhale into the Exhale Pipe and look into the test result (user alcohol level: BAC *) as follows:

Type A

- Green LED keeps lighting: Safety--under 0.02% BAC (or 0.1mg/L BRAC).
- Yellow LED lights: Caution--0.02% BAC (or 0.1mg/L BRAC) to 0.05% BAC (or 0.25mg/L BRAC).
- Red & yellow LEDs light: Danger --over 0.05% BAC (or 0.25mg/L BRAC).

Type B

- Green LED keeps lighting: Safety--under 0.05% BAC (or 0.25mg/L BRAC).
- Yellow LED lights: Caution--0.05% BAC (or 0.25mg/L BRAC) to 0.08% BAC (or 0.40mg/L BRAC).
- Red & yellow LEDs light: Danger--over 0.08% BAC (or 0.40mg/L BRAC).
- BAC : Blood Alcohol Concentration.

Notice

1. Please make sure to keep holding the POWER button during alcohol test.
2. In order to get an accurate test result, it is recommended to test your BAC at least half an hour after drinking.
3. If left idle for a long time, the Red & Yellow LEDs will keep lighting long during alcohol test as the unit need more time for warm up. Please depress the POWER button several times repeatedly until it can work.
4. Replace two "AAA" batteries when the alcohol tester is not enough turn on or the torch become dim.
5. Do not use torch while alcohol test.

Torch Function

Set the torch switch to <ON> position to turn on the torch. Please do not use the alcohol test function in this status.

Count-up Timer

1. Press the START/STOP button to start the count-up timer when the setting is 0:00.
2. Press the START/STOP button again to stop the count-up timer.
3. Repeatedly press the START/STOP button to switch the count-up timer "start" or "stop".
4. To reset the count-up timer to 0:00, press the HR and MIN buttons at the same time.

Countdown timer

1. Press HR or MIN buttons to set the countdown HOUR or MINUTE.
2. Press the START/STOP button to start the countdown timer.
3. Press the START/STOP button again to stop the countdown timer.
4. Repeatedly press the START/STOP button to switch the countdown timer start or stop.
5. A 2-second pre-warning signal will be given at the last 5 and 10 minutes.
6. The alarm of the countdown timer lasts 60 seconds. Press the HR and MIN buttons at the same time can stop the alarm earlier.
7. To reset the countdown timer to 0:00, press the HR and MIN buttons at the same time.

Disclaimer

This tester indicates BAC (BRAC) for reference only. The manufacture will not take any legal responsibility for this.

P/N: 6012120003 CE