

60x LED Magnifier Instructions




Applications:

- Industrial
- Medical
- Electronics
- Coin & Stamp Collecting
- Education
- Gardening

Operation:

1. Place sample on flat surface.
2. Place microscope vertically with objective lens (D) facing downwards.
3. View sample using eye lens (A).
4. If insufficient light, turn on switch (F) to illuminate LED's (E).
5. If image is not clear, adjust focus adjustment (C) in and out to achieve clearest image.

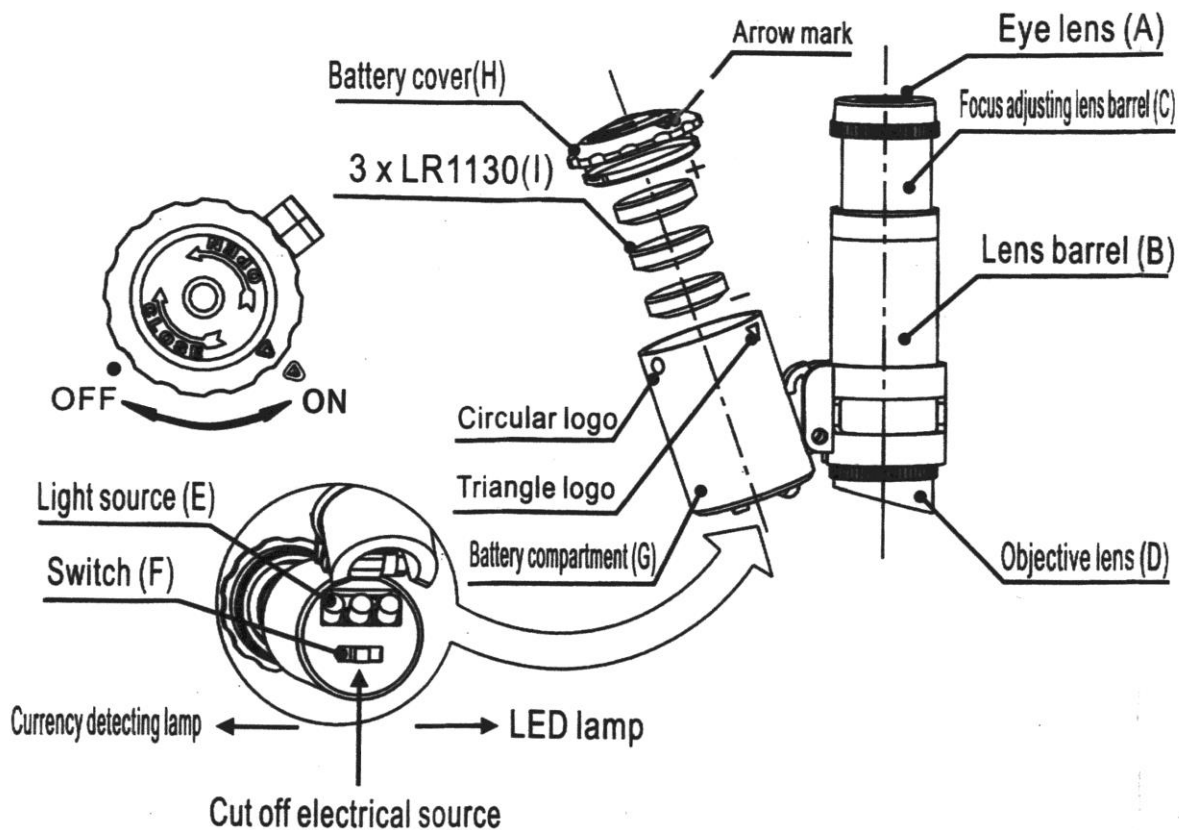

Battery Replacement:

1. Rotate the battery cover (H) counter-clockwise to align the arrows.
2. Open the battery compartment and replace the batteries. (3 x LR1130 or 3 x AG10).
3. Align the battery cover arrows and rotate clockwise to lock.